MIDMARK®

INSTALLATION INSTRUCTIONS FOR 9A76 BASERAIL
USED ON MODELS: 411 (MOUNTED OPPOSITE CONTROL CONSOLE ONLY), 419 (75 ANNIVERSARY)

9A76006: BASERAIL MOUNTED PATIENT'S LEFT HAND
9A76008: BASERAIL MOUNTED PATIENT'S RIGHT HAND

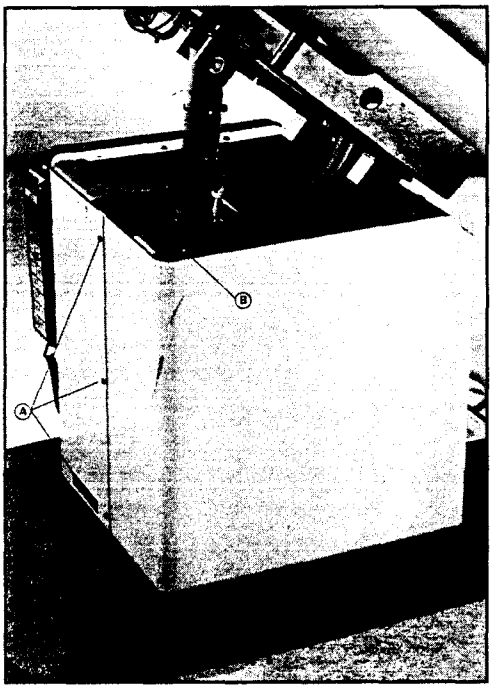

FIG. #3

TYPICAL BASERAIL INSTALLATION:

(EXAMPLE SHOWN IS 411 TABLE-BASERAIL MOUNTED PATIENT'S LEFT HAND)

1. Remove three (3) #8 shroud screws from foot end of table, (Fig. #1, Item #A).
   NOTE: Retain hardware for installation of new shroud supplied with kit.
2. Remove three (3) #8 shroud screws from head end of table, (Fig. #2, Item #A).
3. Run table to chair position with back full up and tilt full down.
4. Remove one (1) #10 shroud mounting screw, (Fig. #2, Item #B).
5. Run tilt function to full up position.
   ** Unplug power cord before continuing. **

DANGER: DISCONNECT POWER CORD FROM WALL RECEPTACLE. FAILURE TO DISCONNECT POWER CORD FROM WALL RECEPTACLE COULD RESULT IN PERSONAL INJURY OR EQUIPMENT DAMAGE.

6. While supporting shroud, remove last #10 shroud mounting screw (Fig. #1, Item #B).
7. Install baserail as shown in Fig. #3, using four (4) 3/8 - 16 x 1" lg. bolts, (4) 3/8 lockwashers, and (4) 3/8 - 16 nuts supplied with kit.
8. Install new shroud (with cutout for baserail) by reversing steps 1 - 6.
9. Verify proper installation by running both table and tilt functions through full up and down positions.

MIDMARK®

ALL PRODUCTS SUBJECT TO IMPROVEMENT CHANGES WITHOUT NOTICE!
LITHO IN U.S.A. INDUSTRY CODE 0251 003-0372-00 (REV. C)
COPYRIGHT BY MIDMARK CORPORATION - 1991

Midmark Corporation, Versailles, Ohio 45380 U.S.A.
937-526-3662 FAX 937-526-5542